



Trailersafe Compact V2

Pre-use inspection guide.

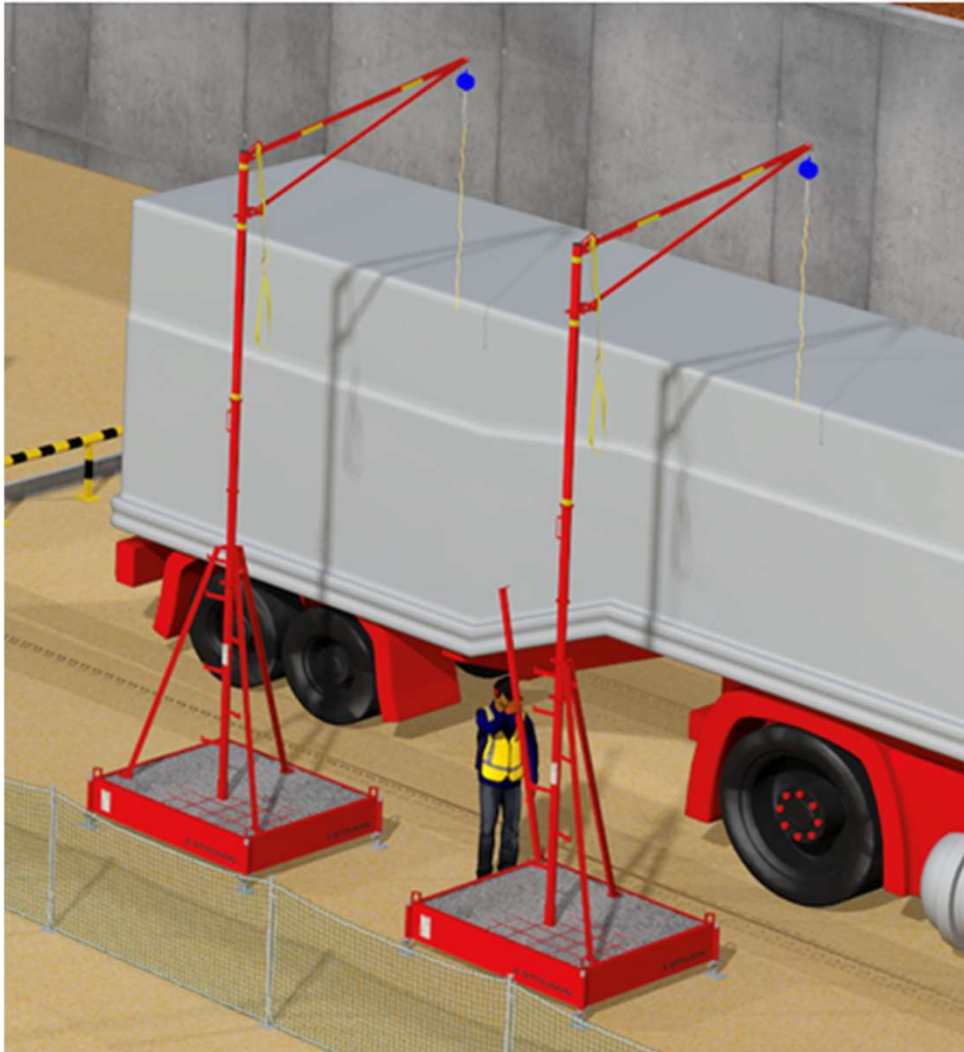

Please read these instructions carefully before inspecting or using this product. If you are in doubt or need assistance please call or message SafetyRespect UK Ltd.

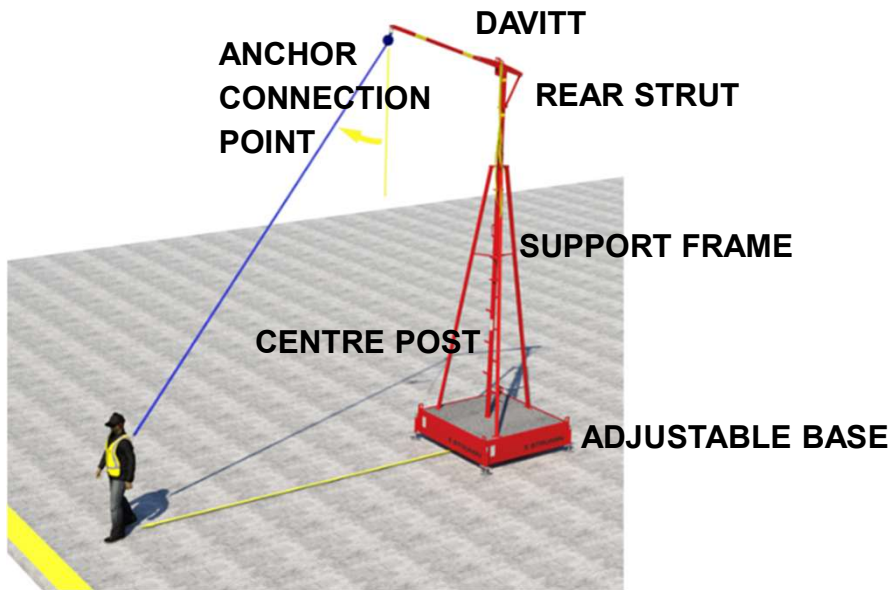

ADJUSTABLE BASE JACKS


Do the threads run freely along their full length ?



LIFTING POINTS

Are they intact without deformity ?

Do they have consistent welds ?

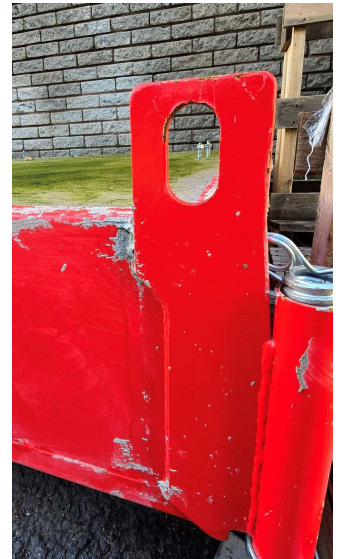

FRAME HOLDING-DOWN BOLTS

Only relevant before the Frame is connected to the Bolts.


Do the threads run freely along their full length ?



DAVITT SUPPORT FRAME

The Support Frame consists of three identical Posts.

Check that the welds are intact, and the Frame legs are straight.

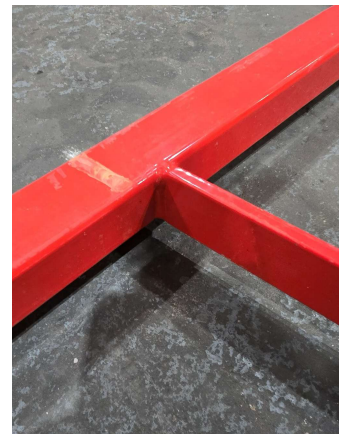

CENTRE POST

Ensure that the 6 x Set Screws and Hex Nuts holding the section are fully tightened. .

**CENTRE POST**

Check the welds on the Rear Strut holding plate and that the connecting bolt is secure and fully tightened. .

**DAVITT**

This is made from 2 x parallel plates so check that they are aligned and that the bolt securing the Rear Strut is in place and tightened.

**ANCHOR POINT**

Check the end point of the Davitt ensuring that the parallel side plates are aligned, intact and the Bolt and Nut is in place to hold the Fall Arrestor.

**IMPORTANT**

If a fall incident occurs the system must be withdrawn from use and the owner (SafetyRespect UK Ltd) informed.

Statutory Periodic Inspection (SPI)

To ensure the function and safety of this system a SPI of the Anchor device, PFPE and Lifting Slings needs to be carried out with appropriate documentation by a qualified person at least every twelve months.